


To connect a CARE/DOS or Rpw : Rowperfect for Windows interface to a PC, a serial port is required. As these are less common on modern PCs, a so called USB Serial Adapter is used to bridge the serial cable from the interface to a USB port on the PC. For Windows to be able to communicate with the USB Serial Adapter, it requires additional software called Drivers. The PlfList utility has been created to test whether these drivers are installed correctly.



Row-Ware sells USB Serial Adapters based on the Prolific 2303 chip set; this utility will only check for drivers for this specific chip set.

To use PlfList, please follow these steps:

1. Download the latest copy from <http://www.row-ware.com/usb/plflist/>
2. Unzip the file PlfList-x-x-x-x.zip to the Desktop.
3. **Disconnect** any USB Serial Adapter from the computer.
4. Run the programme.

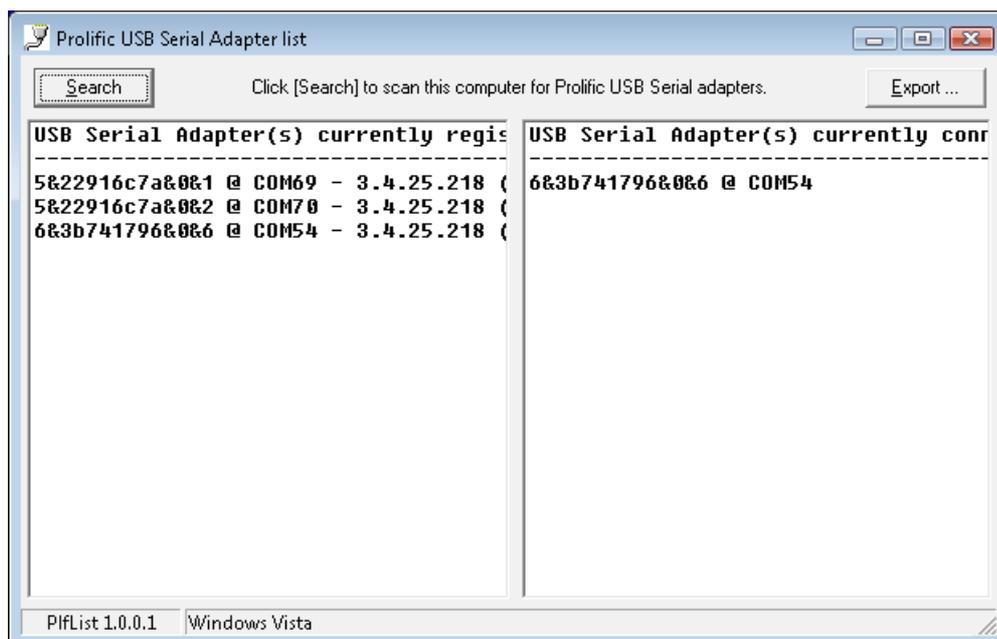

5. Click the [Search] button in the upper left hand corner of the window. The left pane (“USB Serial Adapter(s) currently registered”) should list at least one entry.
6. **Connect** the USB Serial Adapter to the computer.
7. Click the [Search] button again. The right pane should now also list an entry.

If any of the tests fail, click the [Export] button and store the file on the Desktop using a descriptive name (e.g. CURRENT_DATE-YOUR_NAME.txt) and send it to info@row-ware.com for analysis.